 


TN 98

RACOR UNIÓN RECTO




| REF. | DESCRIPCIÓN | ROSCA |
|----------|-------------------|-------|
| 750004LL | UNIÓN TN 98 4-LL | - |
| 750005LL | UNIÓN TN 98 5-LL | - |
| 750006LL | UNIÓN TN 98 6-LL | - |
| 750008LL | UNIÓN TN 98 8-LL | - |
| 750010LL | UNIÓN TN 98 10-LL | - |
| 750012LL | UNIÓN TN 98 12-LL | - |

| REF. | DESCRIPCIÓN | ROSCA |
|---------|------------------|-------|
| 750006S | UNIÓN TN 98 6-S | - |
| 750008S | UNIÓN TN 98 8-S | - |
| 750010S | UNIÓN TN 98 10-S | - |
| 750012S | UNIÓN TN 98 12-S | - |
| 750014 | UNIÓN TN 98 14-S | - |
| 750016 | UNIÓN TN 98 16-S | - |
| 750020 | UNIÓN TN 98 20-S | - |
| 750025 | UNIÓN TN 98 25-S | - |
| 750030 | UNIÓN TN 98 30-S | - |
| 750038 | UNIÓN TN 98 38-S | - |

| REF. | DESCRIPCIÓN | ROSCA |
|---------|------------------|-------|
| 750006L | UNIÓN TN 98 6-L | - |
| 750008L | UNIÓN TN 98 8-L | - |
| 750010L | UNIÓN TN 98 10-L | - |
| 750012L | UNIÓN TN 98 12-L | - |
| 750015 | UNIÓN TN 98 15-L | - |
| 750018 | UNIÓN TN 98 18-L | - |
| 750022 | UNIÓN TN 98 22-L | - |
| 750028 | UNIÓN TN 98 28-L | - |
| 750035 | UNIÓN TN 98 35-L | - |
| 750042 | UNIÓN TN 98 42-L | - |

TN 98 R

 RACOR UNIÓN RECTO REDUCIDO



| REF. | DESCRIPCIÓN | ROSCA |
|----------|------------------------|-------|
| 740604LL | UNIÓN TN 98 R 6LL- 4LL | - |
| 740804LL | UNIÓN TN 98 R 8LL- 4LL | - |
| 740806LL | UNIÓN TN 98 R 8LL- 6LL | - |

| REF. | DESCRIPCIÓN | ROSCA |
|---------|-----------------------|-------|
| 740806S | UNIÓN TN 98 R 8S- 6S | - |
| 741006S | UNIÓN TN 98 R 10S- 6S | - |
| 741008S | UNIÓN TN 98 R 10S- 8S | - |
| 741206S | UNIÓN TN 98 R 12S- 6S | - |
| 741208S | UNIÓN TN 98 R 12S- 8S | - |
| 741210S | UNIÓN TN 98 R 12S-10S | - |
| 741410 | UNIÓN TN 98 R 14S-10S | - |
| 741412 | UNIÓN TN 98 R 14S-12S | - |
| 741612 | UNIÓN TN 98 R 16S-12S | - |
| 741614 | UNIÓN TN 98 R 16S-14S | - |
| 742010 | UNIÓN TN 98 R 20S-10S | - |
| 742012 | UNIÓN TN 98 R 20S-12S | - |
| 742016 | UNIÓN TN 98 R 20S-16S | - |
| 742516 | UNIÓN TN 98 R 25S-16S | - |
| 742520 | UNIÓN TN 98 R 25S-20S | - |
| 743020 | UNIÓN TN 98 R 30S-20S | - |
| 743025 | UNIÓN TN 98 R 30S-25S | - |
| 743825 | UNIÓN TN 98 R 38S-25S | - |
| 743830 | UNIÓN TN 98 R 38S-30S | - |

| REF. | DESCRIPCIÓN | ROSCA |
|--------|-----------------------|-------|
| 740806 | UNIÓN TN 98 R 8L- 6L | - |
| 741006 | UNIÓN TN 98 R 10L- 6L | - |
| 741008 | UNIÓN TN 98 R 10L- 8L | - |
| 741206 | UNIÓN TN 98 R 12L- 6L | - |
| 741208 | UNIÓN TN 98 R 12L- 8L | - |
| 741210 | UNIÓN TN 98 R 12L-10L | - |
| 741510 | UNIÓN TN 98 R 15L-10L | - |
| 741512 | UNIÓN TN 98 R 15L-12L | - |
| 741810 | UNIÓN TN 98 R 18L-10L | - |
| 741812 | UNIÓN TN 98 R 18L-12L | - |
| 741815 | UNIÓN TN 98 R 18L-15L | - |
| 742212 | UNIÓN TN 98 R 22L-12L | - |
| 742215 | UNIÓN TN 98 R 22L-15L | - |
| 742218 | UNIÓN TN 98 R 22L-18L | - |
| 742818 | UNIÓN TN 98 R 28L-18L | - |
| 742822 | UNIÓN TN 98 R 28L-22L | - |
| 743522 | UNIÓN TN 98 R 35L-22L | - |
| 743528 | UNIÓN TN 98 R 35L-28L | - |